



borrowed earth

MONOLITHIC TUB ——— FLOAT

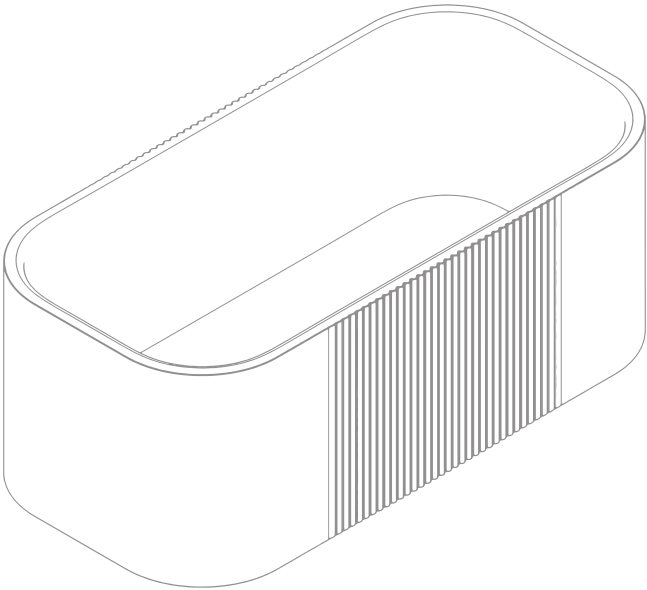


SPECIFICATION SHEET


INSTALLATION  
IN THE BOX

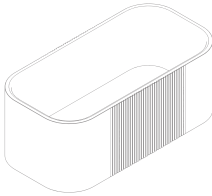

1. Bathtub


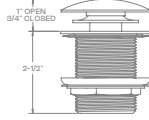


2. Drain Kit (BDWOF-ST-NS)  
EZ-CLICK™ Bath tub  
Drain without overflow  
(Drain tube not included)


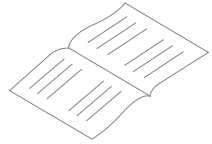


3. Manual


BATHTUB PLACEMENT

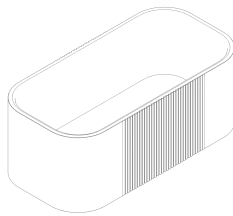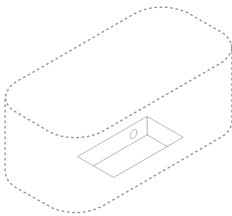


DRAIN KIT PLACEMENT

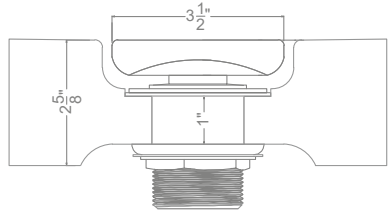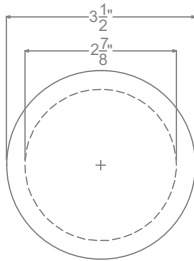

Drain Cap Closed Detail


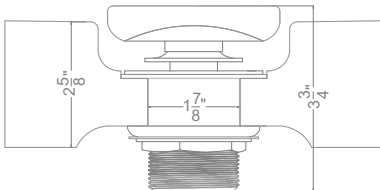


Drain Cap Opened Detail

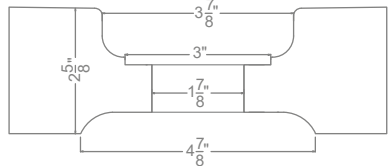


INSTALLATION


UNBOXING

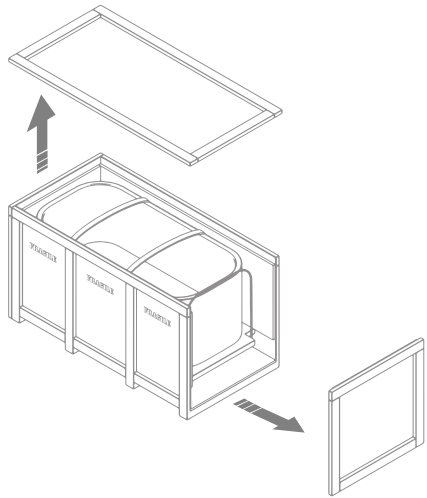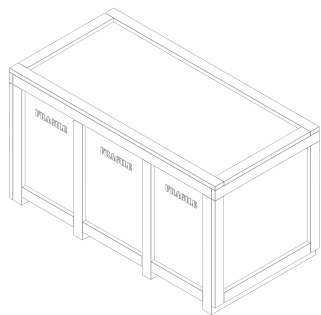

1. Remove the top and front Panel of the Crate.

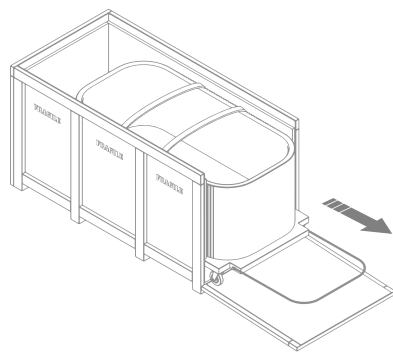


2. Unhook the handle from the Trolley and Pull.

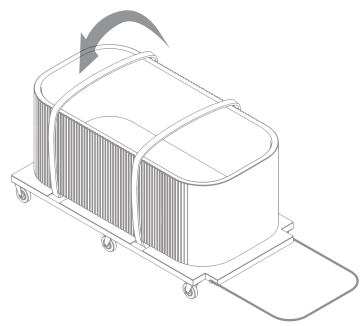

3. Unhook the Belts from the Trolley.


## INSTALLATION

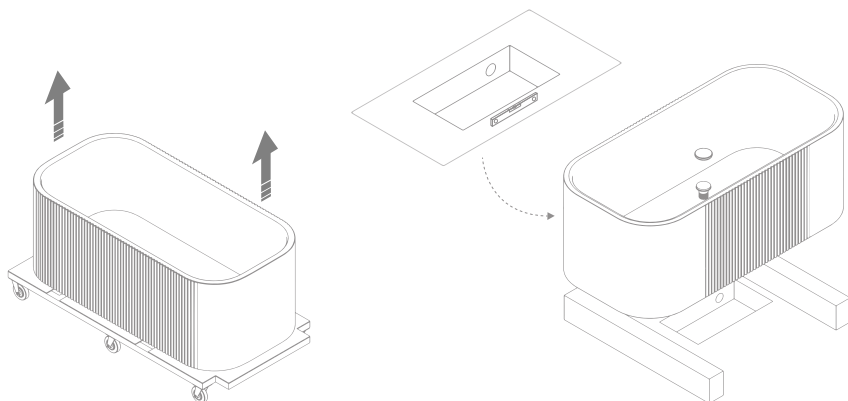


1. Pick the bathtub using mechanical lift or with the help of professionals.

2. Check level of the mortar base, and place the bathtub on top of the wooden spacers.

## INSTALLATION FOR PLUMBER

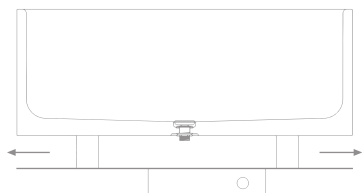

1. Place the Drain Kit and waste pipe under the Bathtub and remove the wooden spacer

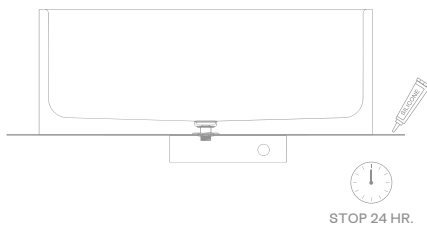

2. Place the tub and apply the silicone on the borders and wait 24. Hours.

**WARNING: PULL THE TUB USING PROFESSIONAL OR MECHANICAL LIFTING EQUIPMENT.**

# borrowed earth

Borrowed Earth celebrates our inviolable connection to nature and attempts to recreate the innate joy of cohabiting amidst it.



+1 (310) 341-6931

+1 (323) 538-3630

WWW. BORROWEDEARTHCOLLABORATIVE.COM

INFO@ BORROWEDEARTHCOLLABORATIVE.COM