


borrowed earth

BENCH — FLUTE

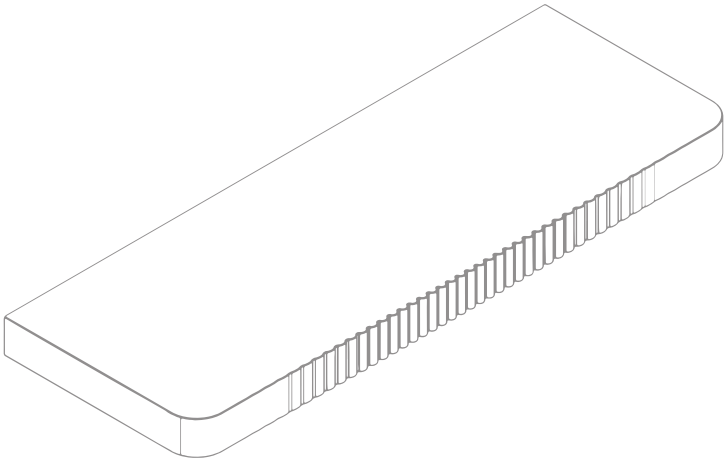


SPECIFICATION SHEET

INSTALLATION


IN THE BOX



1. Washer and Fastener




2. Wall Mount Bracket

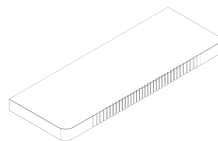


3. The Bench


TOOLS REQUIRED



1. Wrench




2. Drilling Machine




3. Level



INSTALLATION

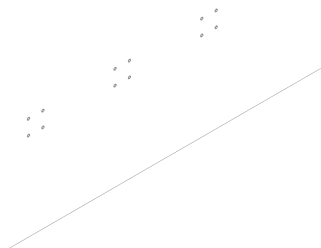

1. Mark the holes/ pointers and drill them.

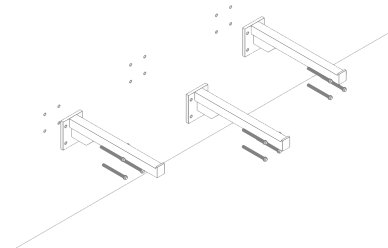


2. Place the 3 wall mount bracket

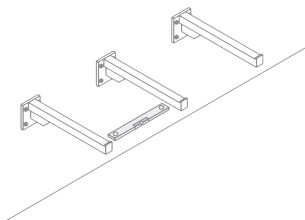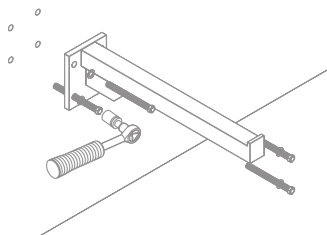


3. Screw the wall mount bracket on the walls using wrench and fastener

4. After the 3 wall mount bracket are placed and level them

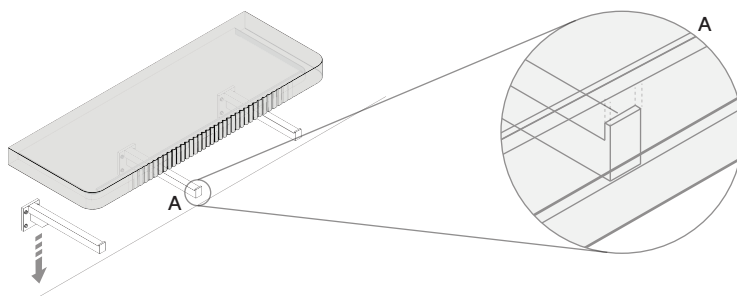

5. Place the bench on top of the wall mount bracket above and secure the position with groove (A)

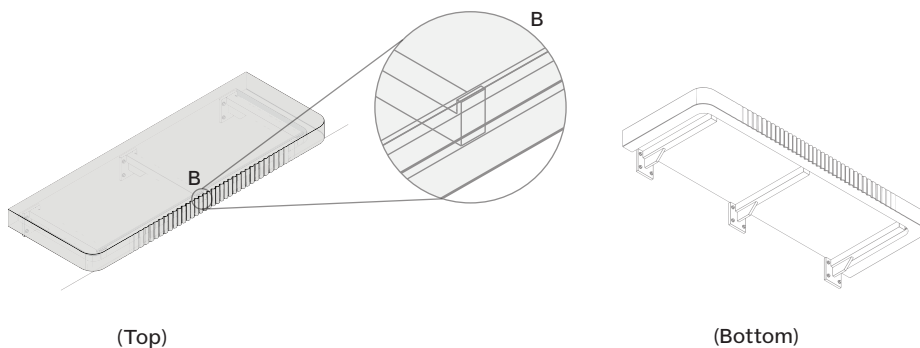

(Top)

(Bottom)

6. Place the top as shown above (B)

borrowed earth

Borrowed Earth celebrates our inviolable connection to nature and attempts to recreate the innate joy of cohabiting amidst it.



+1 (310) 341-6931

+1 (323) 538-3630

WWW. BORROWEDEARTHCOLLABORATIVE.COM

INFO@ BORROWEDEARTHCOLLABORATIVE.COM